
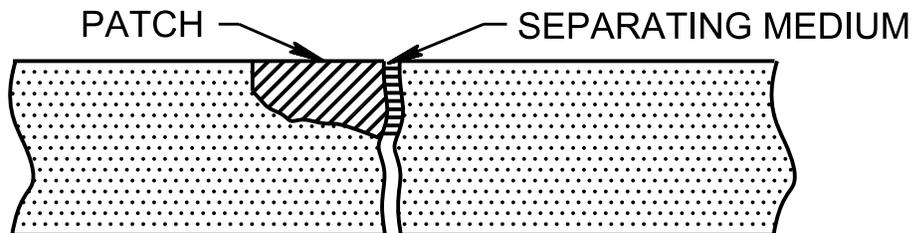
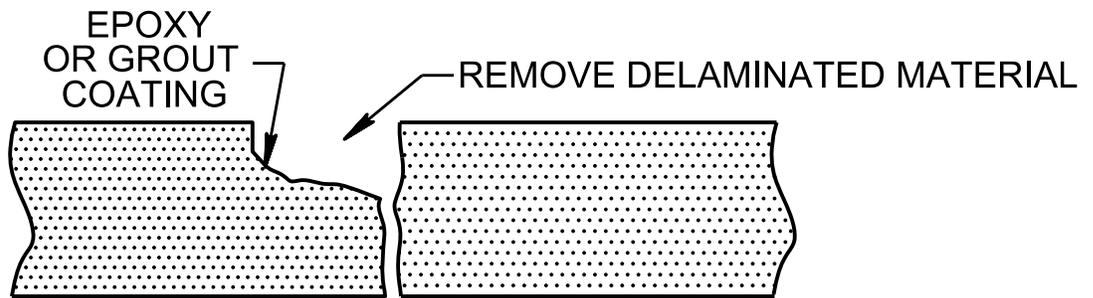
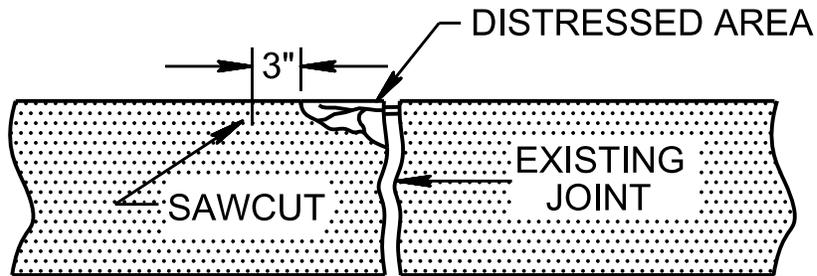
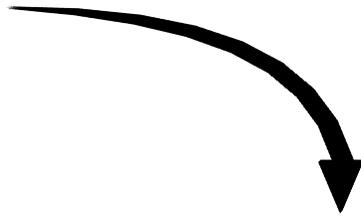


## PARTIAL DEPTH REPAIR

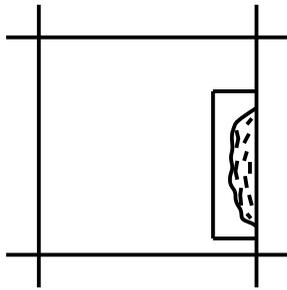

MAKE VERTICAL SAWCUT MIN. 2" DEEP APROX. 3" FROM DISTRESSED AREA  
REMOVE ALL CONCRETE AND LOOSE MATERIAL WITHIN SAWED AREA  
TO SOUND CONCRETE (3" MIN DEPTH)

USE A SEPARATING MEDIUM TO MAINTAIN AND PROTECT JOINT  
USE A BONDING AGENT TO INSURE GOOD CONTACT  
BETWEEN EXISTING PAVEMENT AND PATCH.

GROUT AND PATCH WITH 2" SLUMP CONCRETE.

AFTER PATCH HAS CURED CLEAN JOINT AND APPLY JOINT SEALANT

REFERENCE: TM5-822-9/AFM 88-6, CHAPTER 10, REPAIR OF RIGID

PAVEMENTS USING EPOXY RESIN GROUTS, MORTARS AND CONCRETE.

REPAIR OF CONCRETE PAVEMENTS  
(PARTIAL DEPTH CORNER BREAK)

DATE  
AUG 1992

FIGURE  
2-33b