




REPAIR OF POTHOLES

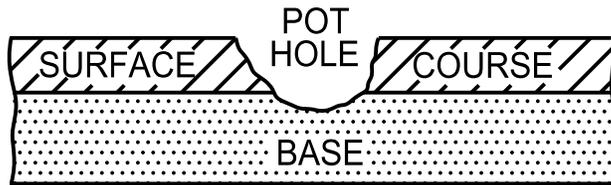

STEP 1: TRIM (VERTICAL SIDES) TO FIRM MATERIAL AND COMPACT

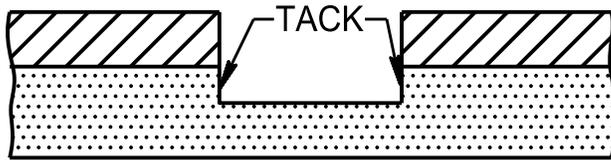

STEP 2: TACK COAT SIDES OF PATCH

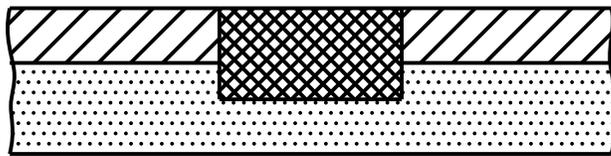

STEP 3: PLACE HOT ASPHALT MIX IN LAYERS NOT TO EXCEED 3 IN; COMPACT AND LEVEL TO SPECIFIED GRADE AND DENSITY

REFERENCE: THE ASPHALT INSTITUTE MANUAL
SERIES MS-16 ASPHALT IN PAVEMENT
MAINTENANCE

REPAIR OF FLEXIBLE PAVEMENTS (POTHOLES)

DATE
AUG 1992

FIGURE
2-34b